

SLAKEBYTE MEDIA REMOTE CONTROL FOR USE WITH XBOX 360™

Thank you for choosing the snakebyte Media Remote Control for use with Microsoft's Xbox 360™! Your media remote lets you control your entire AV system, Xbox 360™ DVD and CD playback, the Xbox™ Dashboard, and many other useful functions.

Before using this product, please read this manual carefully for important safety and health instructions, and for setting up your snakebyte Media Remote Control. Keep all manuals for future reference.

Feature overview:

- Universal Learning Remote Control for up to six different devices (incl. Xbox 360™)
- Controls your entire AV system through learning capability
- „snakebyte guide“-button for easy Xbox 360™ dashboard navigation
- Y, X, A, B-buttons for optimal Xbox 360™ usability – even without controller
- Stylishly green backlit buttons – especially handy in the dark
- Two AA batteries required (not supplied)

ATTENTION! Disposable Battery Safety!

Improper use of batteries may result in battery fluid leakage, overheating, or explosion. Released battery fluid is corrosive and may be toxic. It can cause skin and eye burns, and is harmful if swallowed. To reduce the risk of injury:

- Keep batteries out of reach of children.
- Do not heat, open, puncture, mutilate batteries or dispose of batteries in fire.
- Do not mix new and old batteries or batteries of different types (for example, carbon-zinc and alkaline batteries).
- Remove batteries if they are worn out, or before storing your battery powered device for an extended period of time.
- If a battery leaks, remove all batteries, taking care to keep the leaked fluid from touching your skin or clothes. If fluid from the battery comes into contact with skin or clothes, flush skin with clean water immediately. Before inserting new batteries, thoroughly clean the battery compartment with a damp paper towel, or follow the battery manufacturer's recommendations for cleanup.
- Always dispose of batteries in accordance with your local and national disposal regulations, including those governing the recovery and recycling of waste electrical and electronic equipment (WEEE).

GETTING STARTED

Insert Batteries:

1. Lift the battery cover.
2. Insert two fresh AAA batteries in the polarity shown in the battery compartment.
3. Close the battery compartment and make sure that the lid locks safely.

Set up the snakebyte Media Remote Control for use with your TV

The Media Remote Control controls up to six different devices (cf. illustration 1). It is pre-programmed for use with the Xbox 360™ and the PlayStation®2 and is capable of taking over functions from four of your existing IR remotes. Setting up these universal Learning Keys is easy:

1. Press the mode key of your choice (e.g. TV1) to change into the respective universal mode.
2. Press and hold the mode key until it is completely lit.
3. Press one of the universal keys on the bottom half of the Media Remote Control and the mode key will start flashing slowly.

4. Point your TV remote towards the topside of the Media Remote Control (Make sure the IR LED on the two remotes are on the same level within a range of max. 3 cm, cf. illustration 2.) and press the remote control's key you want to assign. When the mode key quickly flashes twice and then turns off, the key is successfully set up with the same function of the key on your original remote. If not, please repeat steps 2 to 4 until the mode key flashes and turns off properly.
5. Repeat steps 2 to 4 to program other universal keys.

After all universal keys are successfully set up, the remote stays in the mode of your choice. You can control your programmed device now, switch back to another mode or program further modes.

You can set up any key of an IR remote to the universal keys on the remote.

Note:

- The universal keys can only learn commands from an IR remote.
- The universal keys only memorize the latest function programmed.
- When using the Media Remote Control for the first time, the universal keys have no function in any of the universal TV modes.
- You need to set up each individual key by repeating the above 4 steps.

USING YOUR SNAKEBYTE MEDIA REMOTE CONTROL

Use the mode keys to switch between universal and pre-programmed (Xbox 360™ & PS2) modes. There is no default mode (i.e. neither Xbox360™ mode nor any other modes are default) for the Media Remote Control.

The functions for the Xbox 360™ game console of the snakebyte Media Remote Control are identical to those on Microsoft's original Xbox 360™ Universal Media Remote.

GUARANTEE & TROUBLESHOOTING

In case you encounter problems, please try the possible solutions provided below before contacting our customer support.

Video or sound is poor or not working?

- Make sure your AV cable is properly connected.

Poor Performance with the Xbox 360™ Console?

- Make sure that you have fresh batteries in your remote control.
- Point the remote directly at the infrared sensor adjacent to memory unit slot A.
- Verify that the infrared sensor is not blocked or covered.
- Make sure that you're using the remote within a 10 feet range of the infrared sensor.
- Close drapes and blinds during daylight hours to minimize ambient infrared.

NEED MORE HELP?

Please contact our customer support:
support@sunflex-europe.com

SAFETY WARNINGS

Do not attempt repairs!

No user serviceable parts inside! Do not attempt to take apart, service, or modify the Media Remote Control, power supply, or its peripherals in any way. Doing so could present the risk of serious injury or death from electric shock or fire, and will void your warranty. May contain nuts!

This guarantee covers only the material and processing defects of a product manufactured by SUNFLEX EUROPE GMBH. Guarantee services are therefore

ruled out if the defects or faults are not caused by SUNFLEX EUROPE GMBH, especially in case of wrong use, mechanical damage (e.g. scratches, pressure marks, breakages), inappropriate storage or cleaning, damage due to transportation, misuse or any other fault of the customer or a third party, especially if the instructions described in the operating manual are not followed, fire, flood, chemical or biological actions, acts of violence or similar incidents, defects of any nature in the accessory parts or other components (regardless of whether they were supplied by SUNFLEX EUROPE GMBH) which are not part of the product covered by this guarantee
any attempt by any person not authorized by SUNFLEX EUROPE GMBH, to adjust, modify, install or to perform service of the product

Accessory parts such as cartons, packaging, batteries or other consumables which are used in conjunction with the product and are expected to be replaced are not covered by the guarantee.

LEGAL AND OTHER CLAIMS

snakebyte is a registered trademark of sunflex Europe GmbH. Microsoft® is a registered trademark of Microsoft Corporation. Xbox 360™ is a registered trademark of Microsoft Corporation. This product is not designed, manufactured, approved, sponsored or endorsed by Microsoft. All trademarks are held by their respective owners.

SUNFLEX EUROPE GMBH does not give any other guarantee or similar declaration other than the one given here. Other legal or contractual claims, even against the seller of the product are ruled out, provided SUNFLEX EUROPE GMBH has provided the services based on this guarantee. This guarantee does not impair or influence the legal guarantee claims or other contractual claims of the customer towards his seller.