

GAMES COLLECTION

INCLUDES:

MANGO FISH ADVENTURE / SWING FEVER / SHREW MOUSE PARTY / 1945 / PLANET PENGUIN-
RACER / STREET RACING / NEVERBALL XL / SKATING PENGUIN DEMO / NEVERPUTT XL



**USER MANUAL
BEDIENUNGSANLEITUNG
MODE D'EMPLOI**

TABLE OF CONTENT

- Important Safety Instructions
- Introduction
 - Thank you very much!
- Specifications
- System Requirements
- Installation
- Operating Instructions
- The Game Collection
- Troubleshooting
- Contact and Support
- Terms of Guarantee

IMPORTANT SAFETY INSTRUCTIONS

- Before using your Snakebyte Motion XS Controller please read this manual thoroughly. If you comply with all instructions and tips, using the Motion XS Controller is easy and comfortable. Please retain this manual for future reference.
- If you don't want to lose your warranty please refrain from opening the Motion XS Controller – there are no user serviceable parts inside anyway. Inappropriate handling does invalidate the warranty and often leads to malfunctions of the device.
- Keep your Motion XS Controller away from liquids and liquid containers such as vases, bottles, hot baths, jacuzzi tubs, etc. Any damage occurring from liquids invalidates the warranty.

INTRODUCTION

Thank you very much!

Congratulations for purchasing the Snakebyte Motion XS Controller. We really appreciate your trust in our fine products. This controller was thoroughly produced under constant quality inspection and according to international quality and safety standards. Have fun with this product.

If you follow this manual, set up, operation, and basic maintenance of the Motion XS Controller is simple. In case you encounter any problems exceeding this manual please contact your dealer or our friendly customer support under support@sunflex-europe.com.

SPECIFICATIONS

- Wired six axes motion sensing USB game controller
- The Motion XS Controller allows for linear, spin as well as tilt motion on the X, Y and Z axis, offering superior, intuitive game control even for unexperienced players
- Also features one analog thumbstick and three digital action buttons for conventional game control
- Ergonomic design with comfortable rubber grips
- A collection of nine games designed specifically for use with the Motion XS Controller is included
- Plug&Play USB 2.0 interface, 2 metre cable length

SYSTEM REQUIREMENTS

- Windows XP / Vista 32-Bit
(Windows 98, NT, Vista 64-Bit are not supported)
- DirectX 9.0C or above
- 1.6 GHz Processor or faster
- 1 GB of System RAM or more
- At least 64 MB Graphics Card
- Sound Card with 100% DirectX 9.0C compatibility
- 500 MB of free HD space
- Motion XS Controller

Technical data is subject to change without notice.

INSTALLATION

Included in delivery


Within the package of the Snakebyte Motion XS you should find the following items:

- 1x Motion XS Controller
- 1x Game Collection (CD)
- 1x this manual

If any part is missing or obviously broken please contact your dealer immediately. If there are more than the three mentioned items included – congratulations!

Connect your Motion XS Controller to any USB 2.0 port of your personal computer. The driver will install automatically. Once installed, you may access your computer's control panel in order to calibrate the Motion XS Controller. In order to do so please double-click the icon entitled "Game Controllers" and select the Motion XS Controller. Click "Properties", followed by "Calibrate". Carry out the calibration process according to the on-screen instructions.

Besides conventional control options (thumbstick & action buttons) the Motion XS provides linear, spin as well as tilt motion detection on the X, Y and Z axis. Please refer to the illustrations below to find out more.

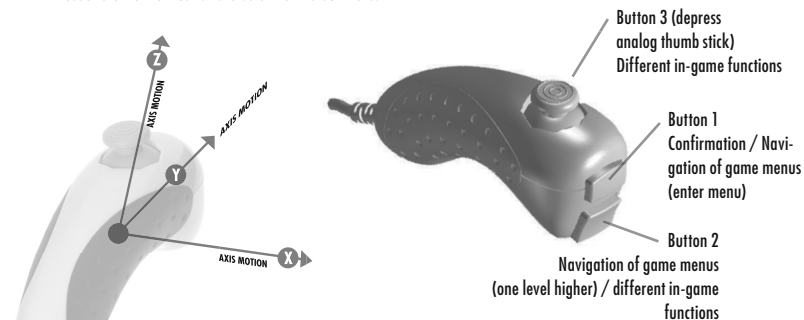

Tilt motion

Rotate left by 90°

Rotate right by 90°



Linear up



Z-Axis Linear motion



Linear down



Y-Axis forward



Tilt motion

Tilt upward



Tilt downward



X-Axis Left

X-Axis Right



Spin Motion Counter Clockwise



Spin Motion Clockwise

Y-Axis backward





Swing Fever

Complete four stages with nine different mini games using one of two game characters (cowboy & cowgirl) and help the couple with different tasks at hand, such as house building, cooking or fishing.

Controls

- Menu navigation:** Tilt the Motion XS controller horizontally and vertically to highlight the game's different options. Once highlighted select the option by pressing button 1 on the Motion XS controller or return to the former menu by pressing button 2.
- In-game controls:** Please pay attention to the on-screen instruction of each mini game in order to find out about each game's controls.

Modes

Swing Fever offers three game modes:

- Single Mode** Complete the single player story, i.e. all nine different mini games
- Free Mode** Choose single mini games and try to improve your score without having to complete the full story
- VS Mode** Compete with your friends for the highest score

Single Mode offers two difficulty levels, Easy and Normal. While the mini games are played exactly the same way, the only difference between difficulties is the rating of your score, with Normal requiring you to perform much better in order to achieve an "Excellent" rating.



Mango Fish Adventure

In this 2D action game Mango the Fish needs your help on his long way home through dangerous, hostile waters, after escaping from a fishing net.

Controls

- Menu navigation:** Tilt the Motion XS controller horizontally and vertically to highlight the game's different options. Once highlighted select the option by pressing button 1 on the Motion XS controller or return to the former menu by pressing button 2. Alternatively you may use the analog stick to highlight the menu options.
- In-game controls:** Press button 1 in order to shoot. Press and hold button 2 in order to power up the weapon, followed by button 1 to release a salvo of bubbles. Button 3 allows to pause the game and eventually exit the session.



Shrew Mouse Party

Batter your enemies as one of the four game characters Handsome, Star, Smart or Pretty. Attention: Avoid traps and bombs and do not hit your friends.

Controls

Menu navigation: Use the analog stick to highlight the menu options. Once highlighted select the option by pressing button 1 on the Motion XS controller or return to the former menu by pressing button 2 or highlighting the BACK sign and pressing button 1.

In-game controls: Use the analog stick to direct the reticle towards the field you wish to hit and swing the hammer. Button 2 pauses the game.

Make sure to hit enemies, food (in order to increase your energy meter) or coins. Missing results in loss of energy and damage to your own health.

Difficulty levels

The game has three stages with 10 levels each. Each 10th level is a boss fight.



1945

Fight waves of hundreds of enemy planes in this revived classic arcade shooter.

Controls

In-game controls: Tilt the Motion XS controller horizontally and vertically to navigate the plane and shoot by pressing button 1.



Planet Penguin Racer

Attend a slightly different race as a penguin gliding down slopes, avoiding obstacles, contending for the win.

Controls

Menu navigation: Use your mouse to make your selections.

In-game controls: Tilt the Motion XS controller horizontally to control the penguin.




Street Racing

Weave this game's traffic by avoiding cars on six lanes. Fuel is decreasing, so make sure to collect petrol cans along the way. The farthest run wins!

Controls

In-game controls: Tilt the Motion XS controller horizontally and vertically to steer the car.

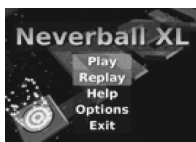

Neverball XL

Collect coins and extras in this balancing game and leave the platforms within time limits through the exit holes. Caution, highly addictive!

Controls

Menu navigation: Use your mouse to make your selections.

In-game controls: Tilt the Motion XS controller horizontally and vertically to control the ball. The space bar pauses the game.



Neverputt XL

Use the Motion XS controller like a golf club and complete three courses with 62 holes.

Controls

Menu navigation: Use your mouse to make your selections.

In-game controls: Define the direction of your hit by tilting the controller horizontally, followed by pressing button 1. Then set the strength of your hit by tilting the controller and pushing button 1 again. Next swing the Motion XS Controller like a golf club in order to carry out the predefined hit. The space bar pauses the game.



Skating Penguin (Demo version)

A preview of the upcoming Motion XS software title Skating Penguin with three levels. Collect all penguins and lead them into safety while avoiding predators and abysses.

Controls

Start the demo with button 1. Control the penguin by tilting the controller. Collect the young penguins and lead them home. By lifting the controller fitfully your penguin jumps, which allows you to leap across holes and temporarily stun predators.

TROUBLESHOOTING

If you encounter any problems using the Snakebyte Motion XS Controller please read this section carefully before contacting our customer support or your dealer.

1. My Motion XS Controller does not work correctly at all.

Make sure the USB port you are using is USB 2.0 compliant. The Motion XS Controller is not USB 1.1 compatible. Please also make sure the USB port in use is installed correctly. Try to connect the controller to different USB ports in order to rule out any possible defects.

2. My game seems to receive input signals although I do not even touch the controller.

Use the Calibration option in your computer's control panel as described above in the Installation section of this manual.

3. The Games Collection is not running on my computer at all.

Make sure DirectX 9.0C is installed and try to run the Games Collection again. Please also make sure that your computer's hardware complies with the Games Collection's minimum requirements.

CONTACT AND SUPPORT

If you still encounter problems that can not be solved by reading the section „troubleshooting“, please contact us:

Sunflex Europe GmbH
Obere Oese 2-4
58675 Hemer
Germany
support@sunflex-europe.com

TERMS OF GUARANTEE

We issue a guarantee of two years after purchase of the Snakebyte Motion XS Controller. Therefore, please preserve your invoice, e.g. together with this manual.

In order not to invalidate the warranty and to protect your health never try to repair and/or open the device. There are no user serviceable parts inside anyway. On top, the danger of electric shock or even fire is reduced considerably.

The guarantee is limited to defective parts or faulty assembly of the Controller exclusively, i.e. it only covers manufacturing defects.

Amongst others the following defects can not be asserted:

- basically all defects resulting from violation of this manual
- defects resulting from improper use or cleaning
- mechanical and optical flaws (e.g. scratches, broken casing caused by brute force or carelessness)
- defects caused by force majeure
- any defects caused by components that are not themselves parts of or the Controller itself

CERTIFICATIONS

- ROHS
- WEEE
- CE

©2008 Sunflex Europe GmbH. Snakebyte is a registered trademark of Sunflex Europe GmbH. VRMS is a trademark of Kamco (ASIA) Ltd. All trademarks are held by their respective owners.

