



WIRELESS MOTION XS CONTROLLER

User Manual



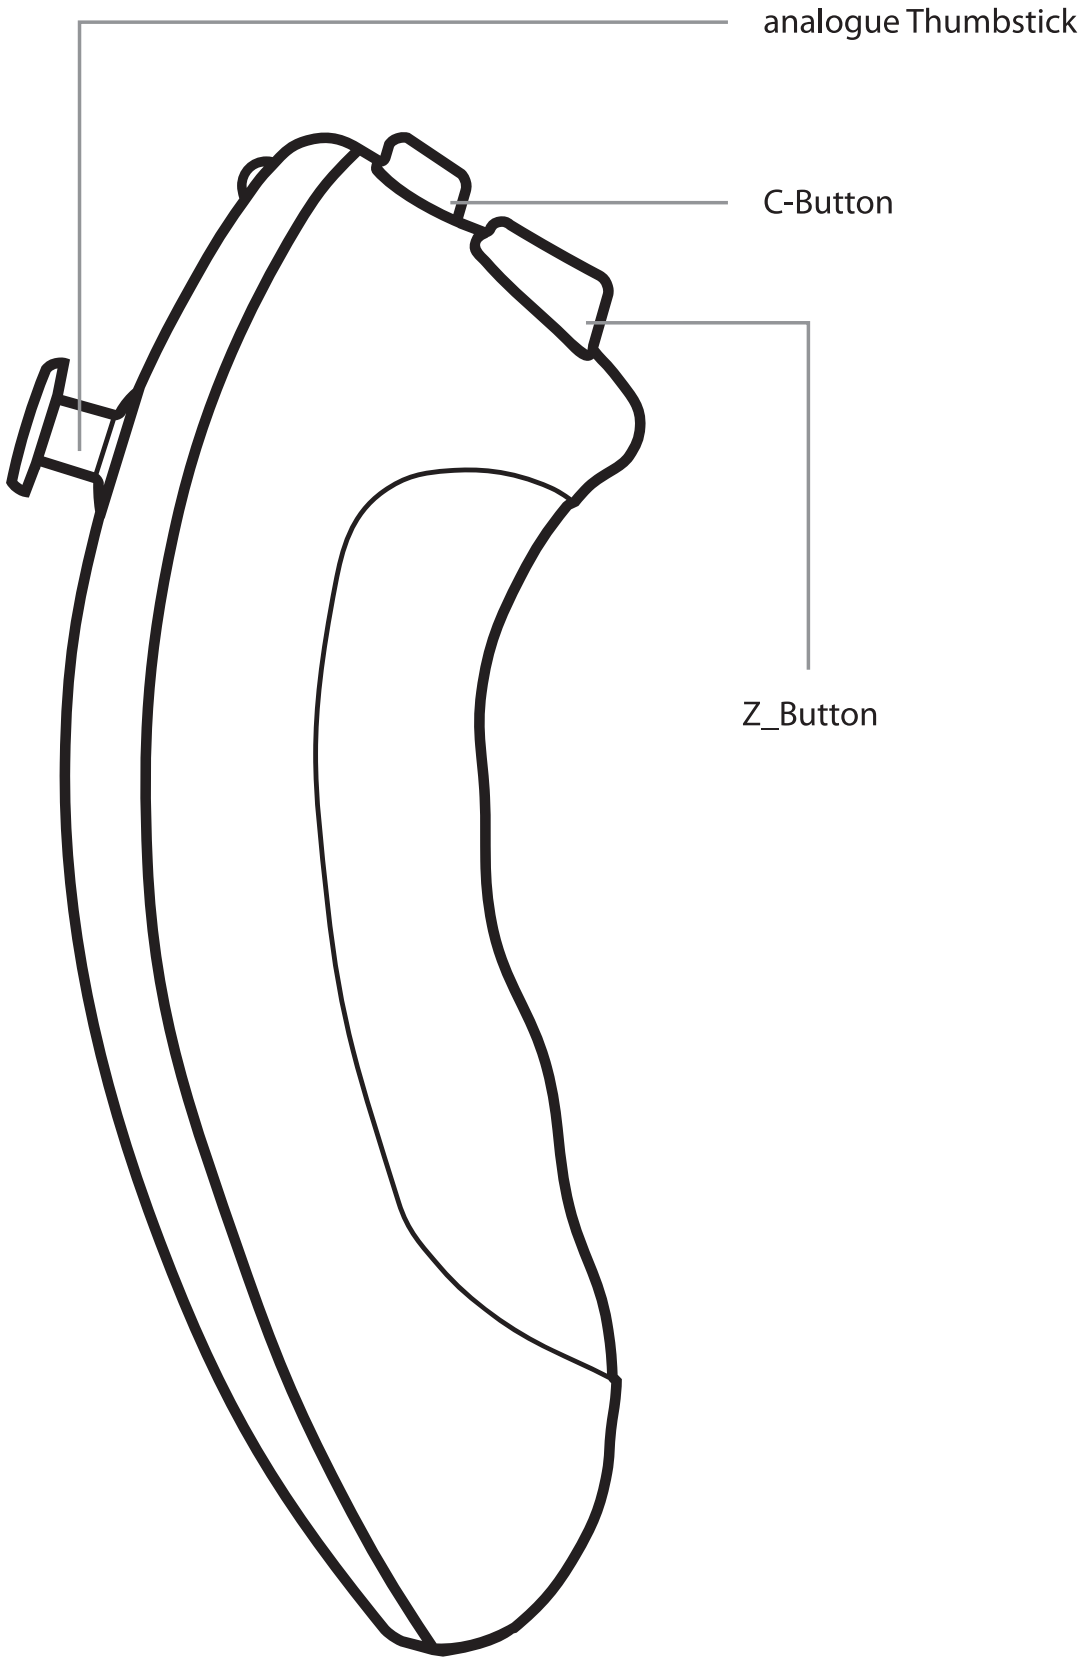


TABLE OF CONTENT

- Important Safety Instructions
- Introduction
- Thank you very much!
- Specifications
- Installation
- Troubleshooting
- Contact and Support
- Terms of Guarantee
- Further products of the snakebyte range

Important safety instructions

- Before using your snakebyte Wireless Motion XS for Wii™ please read this manual thoroughly. If you comply with all instructions and tips, using the Wireless Motion XS is easy and comfortable. Please retain this manual for future reference.
- If you don't want to lose your warranty, please refrain from disassembling the Wireless Motion XS – there are no user serviceable parts inside anyway. Inappropriate handling does invalidate the warranty and leads to malfunctions of the device.
- Keep your Wireless Motion XS away from liquids and liquid containers such as vases, bottles, hot baths, jacuzzi tubs, etc. Any damage occurring from liquids invalidates the warranty.

Introduction

Thank you very much!

Congratulations for purchasing the snakebyte Wireless Motion XS. We really appreciate your trust in our fine products. This controller was thoroughly produced under constant quality inspection and according to international quality and safety standards. Have fun with this controller.

If you follow this manual, set up, operation, and basic maintenance of the Wireless Motion XS is cakewalk. In case you encounter any problems exceeding this manual

please contact your dealer or our friendly customer support under support@snakebyte-europe.com.

Specifications

- Wireless Motion XS extension for the snakebyte Remote XS or for use with the Wii™ Remote
- Wireless connection to the main controller (sold separately)
- State-of-the-art 2.4 GHz wireless technology, virtually lag-free
- Extends your Remote XS/Wii™ Remote with two additional buttons, a fully analog thumbstick and an extra motion sensor enhancing the gameplay
- Extra small wireless receiver plugs into the main controller and allows for untroubled gameplay
- No interference: up to four Wireless Wireless Motion XS can be used simultaneously in multiplayer matches
- Perfect ergonomics, intuitive handling
- 100% compatible with all games that support the original Nunchuk
- requires 2 AAA batteries (not included)

Technical data is subject to change without notice.

Installation

Connecting the Wireless Motion XS

- Equip your Wireless Motion XS with two AAA batteries and make sure you always replace both batteries at the same time and do not mix different types of batteries
- Connect the Wireless Motion XS receiver with the Extension Connector Port on the Wii Controller
- Once console and Wii™ Remote are activated press the Sync button on the Wireless Motion XS to establish a wireless connection between the Motion XS and the receiver. A proper connection is indicated by simultaneously flashing LEDs on the receiver and the Wireless Motion XS.

Proper use of the Wireless Motion XS

The Wireless Motion XS can not be used on its own, without the Wii Remote or

snakebyte Remote XS. It adds another dimension to Wii gameplay, but only complements the main controller.

When using the motion sensing features of the Wii Remote and the Wireless Motion XS please make sure not to move too excessively. Be sure not to hurt people and/or damage objects around you. Make sure not to lose the Wii Controller and Wireless Motion XS while playing by always wearing the wrist strap and holding both items tightly.

There is no need to deactivate your Wireless Motion XS by pressing the Sync button or removing the batteries from the battery compartment. If the Motion XS is not used for some minutes it will automatically enter sleep mode. You need to press the Sync button again to reactivate the Wireless Motion XS.

Consult your game's manual to find out if the Wireless Motion XS needs to be used. Not all games require you to use a Motion XS add-on.

For further information please refer to your Wii™ console's manual.

Troubleshooting

If you encounter any problems using the snakebyte Wireless Motion XS please read this section carefully before contacting our customer support or your dealer.

1. My Wireless Motion XS does not work correctly at all.

Turn off your Wii™ console and turn it on again immediately. Make sure your Wii Controller is synced to the console and the Wireless Motion XS receiver is firmly attached to the Wii Controller's Extension Port. Please refer to the installation instructions above.

2. My game seems to receive input signals although I do not even touch the Wireless Motion XS.

Repeat the synchronisation process by pressing the Sync button on the Wireless Motion XS, this time making sure the analog thumbstick of the Wireless Motion XS remains in its neutral position during syncing. You may also reset the thumbstick by making sure it rests in its neutral position and simultaneously pushing and holding A, B, Plus & Minus on the Wii Controller it is connected with. Keep the buttons pushed for at least three seconds.

Contact and support

If you still encounter problems that can not be solved by reading the section „troubleshooting“, please contact us:

Sunflex Europe GmbH
Obere Oese 2–4
58675 Hemer
Germany
Tel: +49 2372 55439–0
Fax: +49 2372 55439–29
E-Mail: support@snakebyte-europe.com

Terms of guarantee

We issue a guarantee of two years after purchase of the snakebyte Wireless Motion XS. Therefore, please preserve your invoice, e.g. together with this manual.

In order not to invalidate the warranty and to protect your health never try to repair and/or disassemble the device. There are no user serviceable parts inside anyway. On top, the danger of electric shock or even fire is reduced considerably.

The guarantee is limited to defective parts or faulty assembly of the Controller exclusively, i.e. it only covers manufacturing defects.

Amongst others the following defects can not be asserted:

- basically all defects resulting from violation of this manual
- defects resulting from improper use or cleaning
- mechanical and optical flaws (e.g. scratches, broken casing caused by brute force or carelessness)
- defects caused by force majeure
- any defects caused by components that are not themselves parts of or the Controller itself

Certifications

- ROHS
- WEEE
- CE

©2008 Sunflex Europe GmbH. snakebyte is a trademark of Sunflex Europe. Nintendo and Wii™ are trademarks or registered trademarks of Nintendo Inc. This product is not designed or manufactured by Nintendo. All other trademarks are the marks of their respective owners. All rights reserved.

Further products of the snakebyte range

Motion XS



Wireless Retro Controller



Charging Cradle



Remote XS



Premium Component Cable

